



DPDT Foot Switch

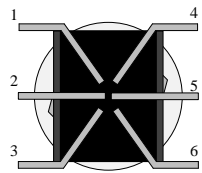

MPSA18
NPN BJT

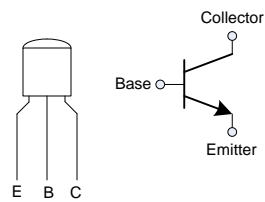

www.modkitsdiy.com
Copyright © 2014 by modkitsdiy.com

"The Wahz" (K-985) Schematic